



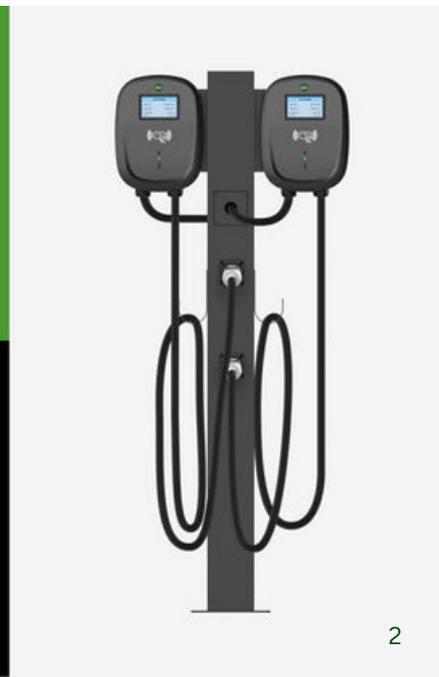

AACHARGING

EV Charger OCPP Configuration Tools App User Manual



Please scan the QR code to download and install the latest version of the EV Charger OCPP Configuration App.

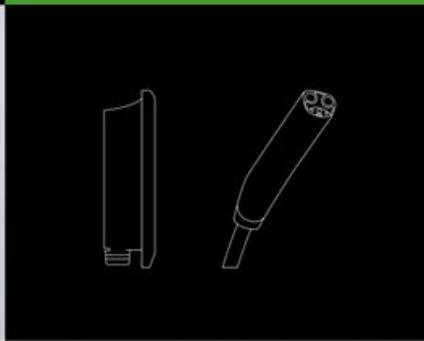

Connection Instructions



Connect to the EV Charger by using bluetooth protocol through the App.

1. Start the EV Charger
2. Open the App

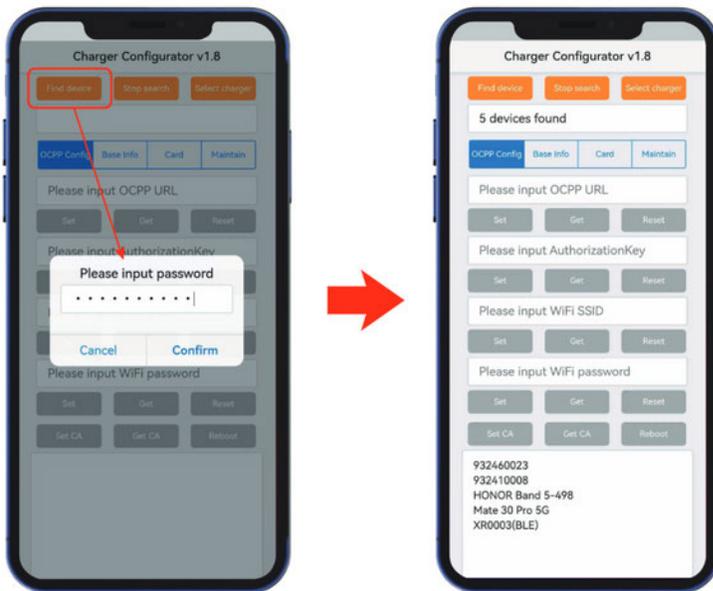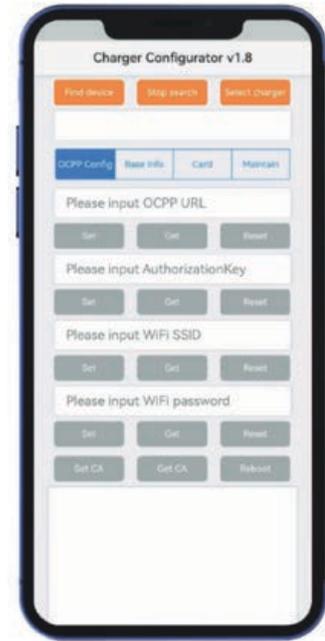


3. Search for bluetooth device (default password: Admin888)

4. Select EV Charger and connect the EV Charger.

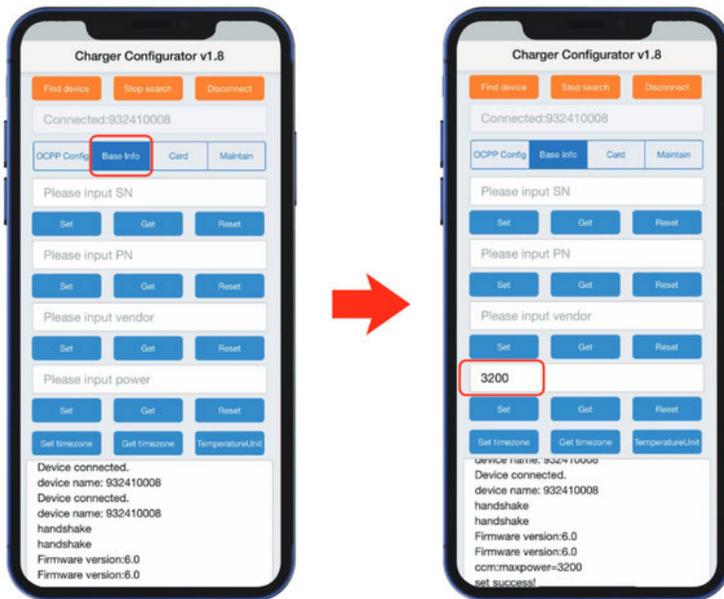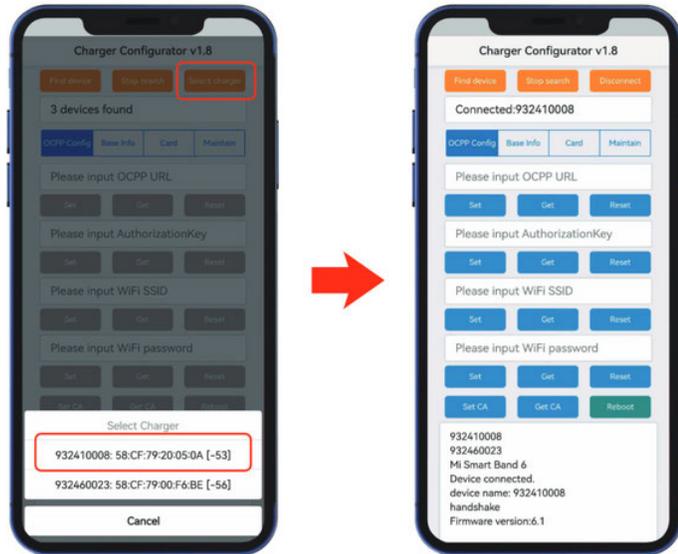

5. Set the input current. Enter input current (ex: 32A). enter 3200, click “Set”.

6. Set 4G connection. Enter Key Words (ex: enter one or more parameters - 4g:apn, 4g:username, 4g:password, Value) click “Set Key Value”.

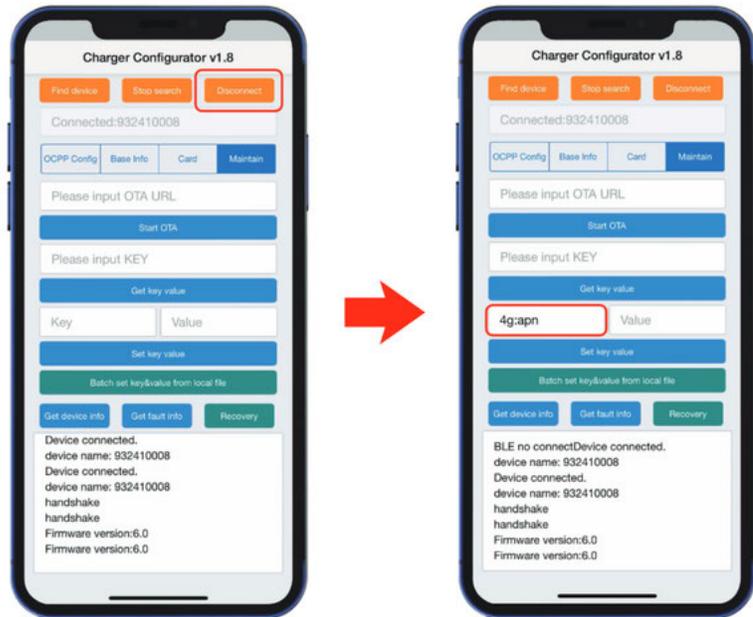

Software Instructions

Configure the OCPP server in the “OCPP Config” tab.

1. Enter OCPP URL (ex: wss://ocpp.io), click “Set”.
2. Enter AuthorizationKey (the password is a 20-byte key), click “Set”.
3. Enter Wi-Fi SSID, click “Set”. (Case Sensitive)
4. Enter Wi-Fi password, click “Set”.
5. Enter input current, click “Set”.
6. Enter Key Words, Value, click “Set Key Value”.
7. Click “Reboot” to restart the EV Charger to take effect on the updated configuration information.

